

Chaos

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Chaos is built to handle the road in style, whether the road is the hallway in your house or the sidewalk outside. Built to $\frac{1}{20}$ scale, it can reach speeds of up to 250 feet per minute. The Chaos operates in only one frequency (27 MHz). You cannot play with more than one radio control toy at the same time that uses the same frequency.

You need four AA batteries (not supplied) to power the Chaos, and one 9-volt battery (not supplied) for the transmitter.

THE FCC WANTS YOU TO KNOW

Your Chaos or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Chaos or transmitter is causing the interference, turn off the Chaos and release the control levers. If the interference goes away, your Chaos is causing it.

Try to eliminate the interference by:

- moving your Chaos and transmitter away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Chaos.

INSTALLING BATTERIES

Cautions:

 
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Chaos or the transmitter.
- If you do not plan to use the Chaos for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Dispose of batteries promptly and properly; do not bury or burn them.

In the Chaos

You need four AA batteries to power your Chaos. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide **ON/OFF** on the bottom of the Chaos to **OFF**.
2. Push back the latch on the battery compartment cover until the

battery compartment box jumps out, then grasp the box to remove it.

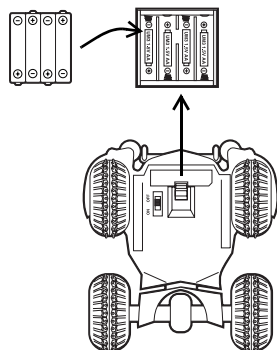

3. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the battery box and be sure it snaps in.

 
If the Chaos moves slowly or does not move at all, replace the Chaos' batteries.

In the Transmitter

The transmitter requires one 9-volt battery. For the best and longest operation, we recommend using a RadioShack alkaline battery.

1. Press **OPEN** on the battery compartment's cover, and slide it in the direction of the arrow marked on it to remove it.

2. Put the battery in the transmitter as indicated by the polarity symbols (+ and -) marked inside.

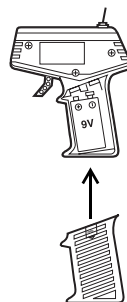


3. Replace the cover.

When the transmitter's range decreases, replace its battery.


DRIVING THE CHAOS

Warning: Never play with your Chaos in the street.

 1. Slide **ON/OFF** on the bottom of the Chaos to **ON**.
2. Hold down the trigger of the transmitter to move the Chaos forward.

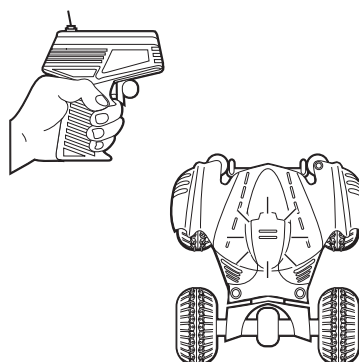

 3. Release the trigger and press it down immediately. It will stand upright and spin with its rear wheels revolving.

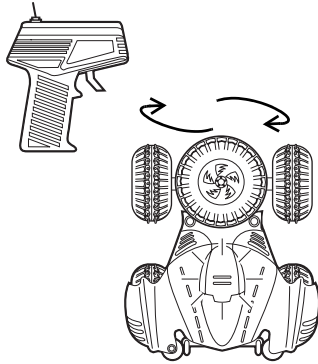

4. Release the trigger to stop the Chaos.
5. Hold down the trigger to move the Chaos forward, then release and press the trigger again to make it move backward.

Note: Your Chaos stops when it runs into something, but the motor keeps running. When this happens, either hold down the trigger on the transmitter to drive it in reverse, or move the Chaos by hand.

6. When you finish driving the Chaos, set **ON/OFF** at the bottom of the Chaos to **OFF**.

HELPFUL HINTS

Follow these hints to get the most enjoyment from the Chaos.

- Running your car continuously for long periods causes wear and tear on the motor. To help keep heat levels down, when your car's battery dies, let the car cool at least 10 minutes before installing new batteries.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car away from the CB.

- You cannot operate your Chaos near devices with transmitters that use the same frequency (27 MHz).
- If the Chaos moves slowly, and you have installed fresh batteries, check the wheel mechanisms for lint, thread, hair, and dust.
- Be sure the Chaos is not out of the transmitter's range (about 40 feet). The range depends on the surroundings and on battery strength. Obstructions (such as buildings, fences, and so on) between the transmitter and the car reduce the range.

CARE

To care for your Chaos so you can enjoy it for years:

- Do not drive the Chaos through puddles or mud, on a wet floor, or in sand, rain, or snow. These can damage it.
- Do not expose the Chaos or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.
- Do not leave the car or transmitter outside overnight. Night dampness can damage their electronic circuits.
- To protect the Chaos' mechanisms from lint and hair, do not drive the Chaos on carpet.
- Wipe the Chaos and transmitter with a damp cloth occasionally to keep them looking new. Do not use harsh chemicals to clean them.

Modifying or tampering with the Chaos' or transmitter's internal components can cause a malfunction and might invalidate the Chaos' warranty and void your FCC authorization to operate it. If your Chaos is not performing as it should, take it and the transmitter to your local RadioShack store for assistance.

USER-REPLACEABLE PARTS

You can order replacement parts for your Chaos at your local RadioShack store.

Description	RSU #
Battery Door (Transmitter)	12258091
Battery Compartment Assembly	12258109
Transmitter	12258398
Bumper Assembly	12258273
Front Wheel Assembly	12258281
Rear Wheel Assembly	12258299
Owner's Manual	12258158

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company- owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-4249
05A00
Printed in Hong Kong